




# FD/FT Zeroing Adjustment Instruction

Version\_20240130


1. Open the menu and select the Zero Adjustment.

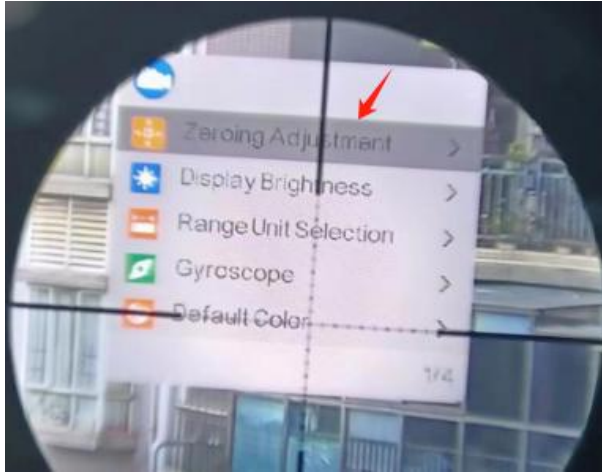



2. There are five data sets(A-E) to save. Press  or  select any set, press "Ok" key to enter.

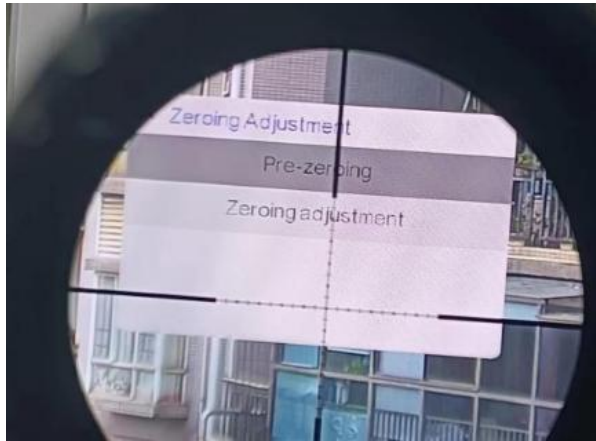

3. Press "Ok" the Pre-zeroing option.



4. Move the X/Y axis by clicking  or  to align the red reticle (German version: Red dot) with the optical scope reticle, press "Ok" key to switch the X/Y coordinates, then press the Menu key to save and return.



5. Then enter the Zeroing adjustment option.



6. Adjust the X/Y axis to move the yellow cross to the aiming point before installing the FD/FT (aiming point in your Optical scope), then press the Menu key to return and save.



**Note:** After each installation of the FD/FT, you can double-click the menu key to confirm whether the red reticle(German version: Red dot) aligns with the optical reticle. The red reticle (Red dot) will automatically vanish after three seconds.